

Title:	Face Terminal RS485 Output Configuration	Version:	v1.0	Date:	4/6/2019
Product:	Access Control	Page:	1 of 4		

## Face Terminal RS485 Output configuration


### Instructions

Face terminals, such as K1T604, 605, 606, 607 support RS485 output mode. In this output mode, face terminal will send person's card number after this person authenticate successfully on the terminal. So you can connect face terminal to access controller or other face terminal to work as a reader.

### Steps

#### 1. Wiring

Connect face terminal's RS485 to controller or another terminal:

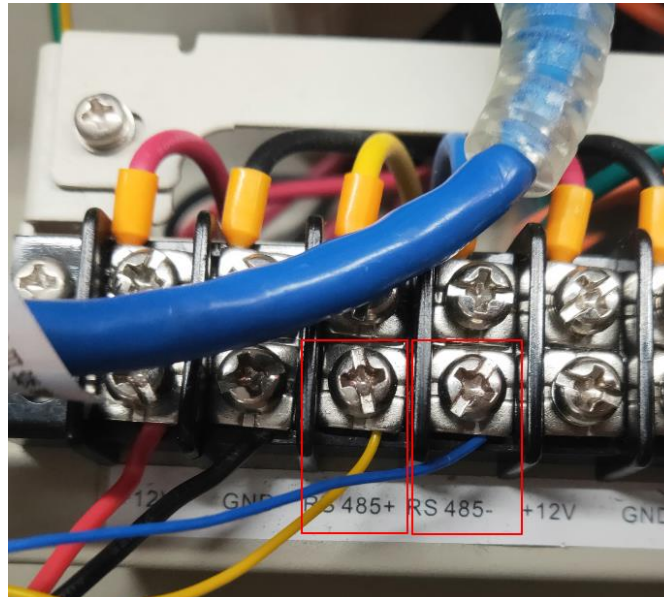


RS485+ ----- Yellow

RS485- ----- Blue

#### 2. Power on face terminal and controller.


#### 3. Change face terminal's RS485 mode to output:

We can do this step either on 4200 or device local interface. Choose external device as **Controller**.

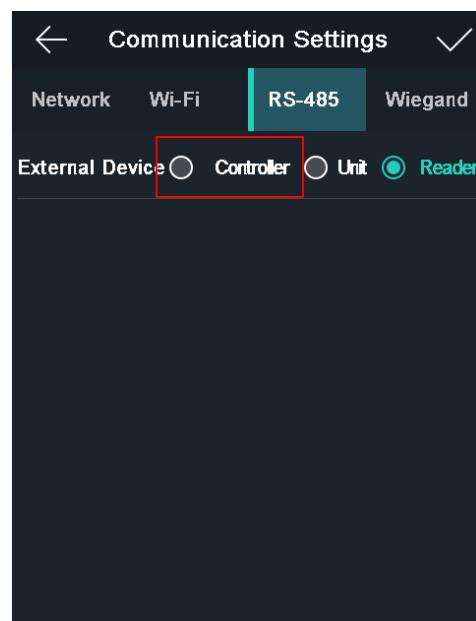

Local Interface


Title:	Face Terminal RS485 Output Configuration	Version:	v1.0	Date:	4/6/2019
Product:	Access Control	Page:	2 of 4		

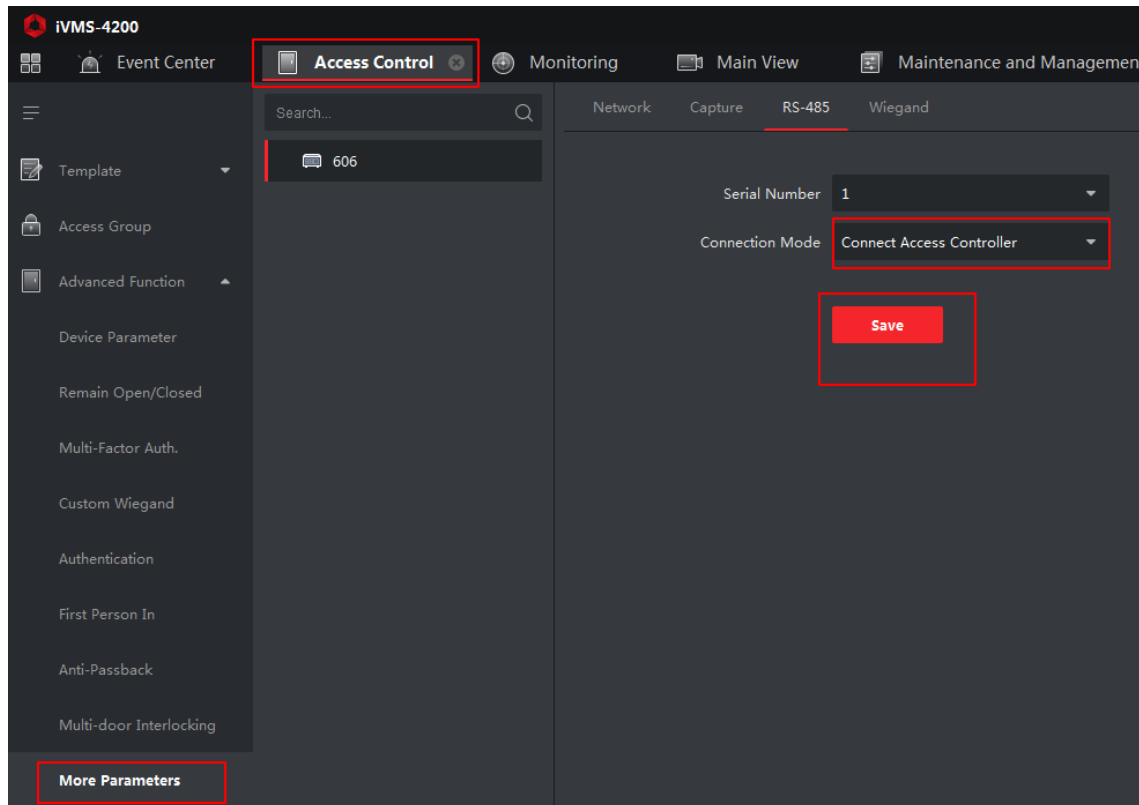

4200 Interface

#### 4. Set RS485 address:

Currently this step can only do on device local interface. The device ID represents device RS485 address.

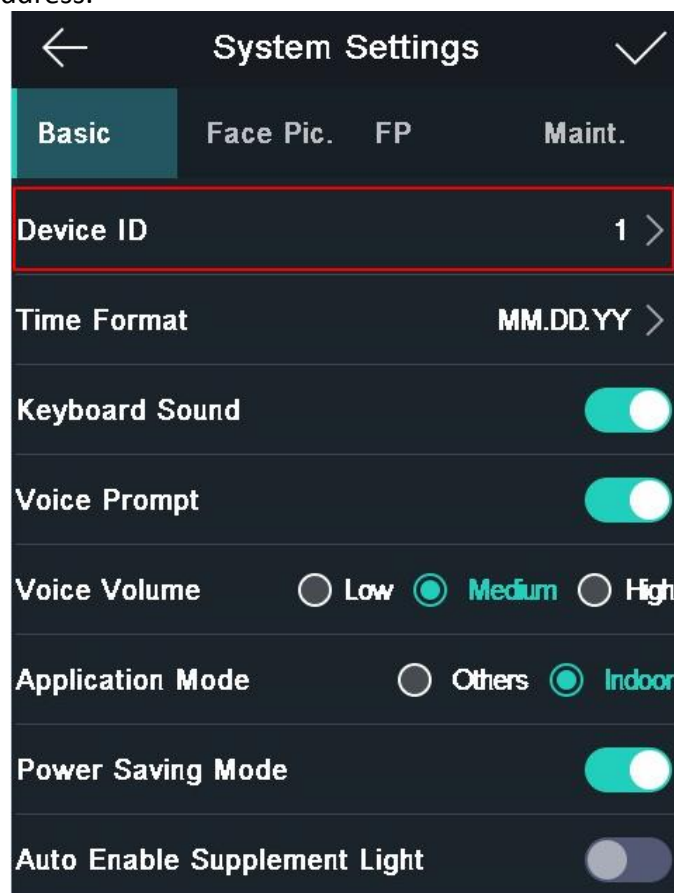



<b>Title:</b>	Face Terminal RS485 Output Configuration	<b>Version:</b>	v1.0	<b>Date:</b>	4/6/2019
<b>Product:</b>	Access Control	<b>Page:</b>	4 of 4		



**First Choice for Security Professionals**  
***HIK*VISION Technical Support**