

INSTALLATION GUIDE

2.4 Inch TFT Terminal

Time Attendance & Access Control

Optional accessories



Wiegand Card Reader



Prox Card



FR1200 FP Reader



K1-1 Exit Button



Door Lock



Door Sensor


Safety Precautions

The following precautions are to keep user's safe and prevent any damage. Please read carefully before installation

-   **Do not** install the device in a place subject to direct sun light, humidity, dust or soot.
-  **Do not** place a magnet near the product. Magnetic objects such as magnet, CRT, TV, monitor or speaker may damage the device.
-  **Do not** place the device next to heating equipment.
-  **Be careful** not to let liquid like water, drinks or chemicals leak inside the device.
-  **Do not** let children touch the device without supervision.
-  **Do not** drop or damage the device.
-  **Do not** disassemble, repair or alter the device.
-  **Do not** use the device for any other purpose than specified.
-  **Clean** the device often to remove dust on it. In cleaning, do not splash water on the device but wipe it out with smooth cloth or towel.

Contact your supplier in case of a problem.

Product Dimension

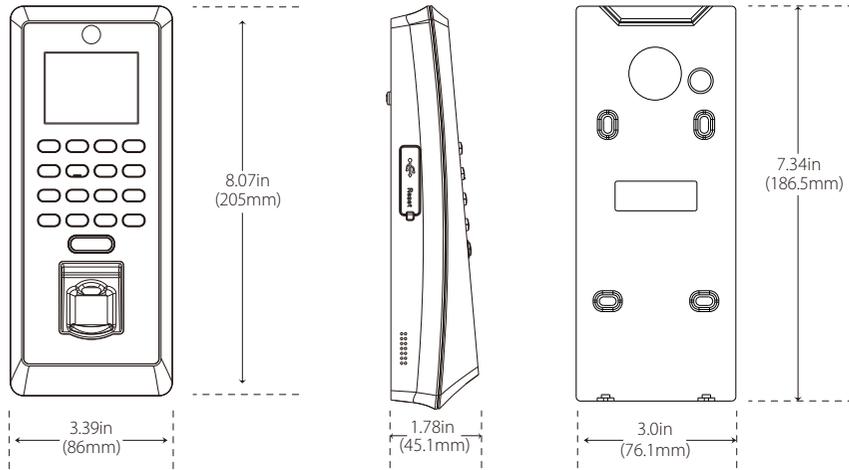


Cables and Connectors

Digital input and Relay output




Wiegand output and RS485

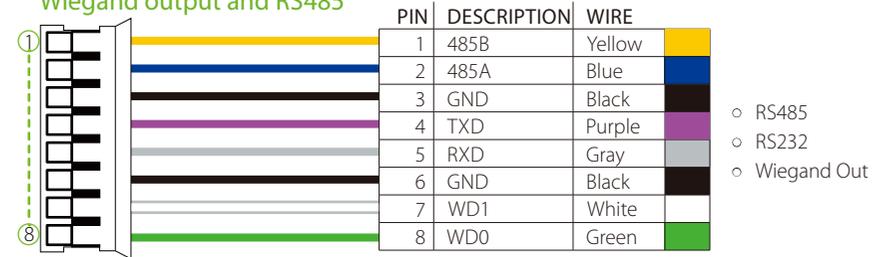


Wiegand input and Power out



Ethernet

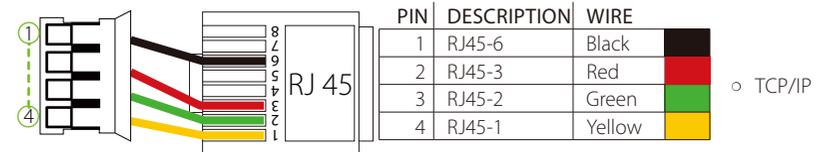


Power

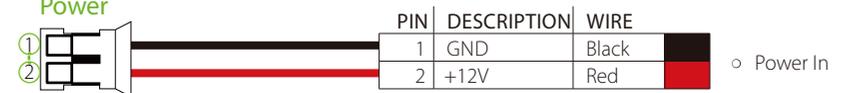


Mounting the device onto the Wall


Fix the back plate onto the wall using wall mounting screws

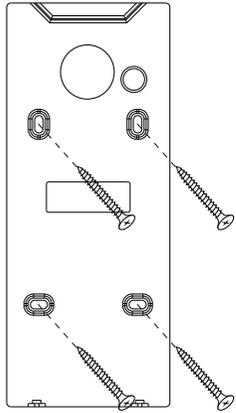

We recommend drilling the mounting plate screws into solid wood (i.e. stud/beam). If a stud/beam cannot be found, then use the supplied drywall plastic mollies (anchors).

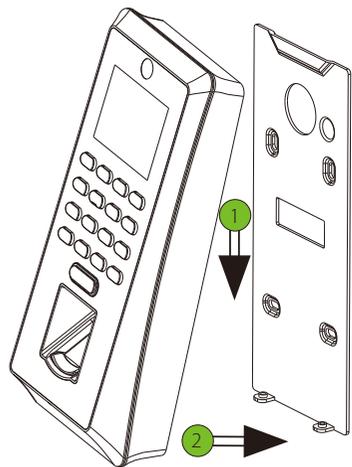


Inserting the device to backplate

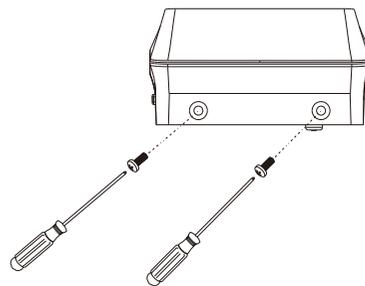


Use security screws to fasten the device to back plate

Power Connection

Without UPS

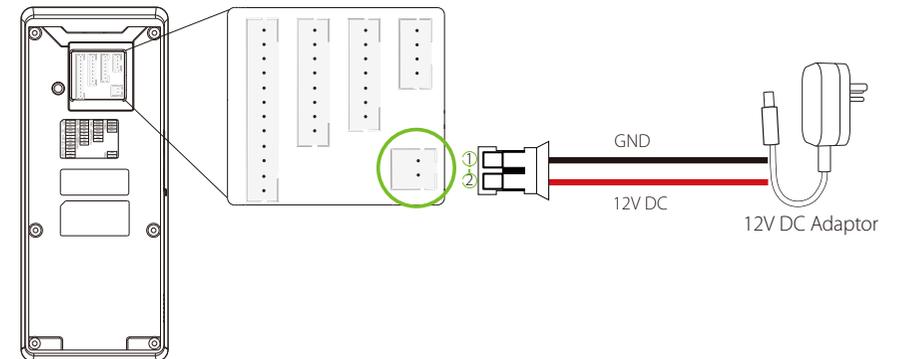

With UPS (Optional)

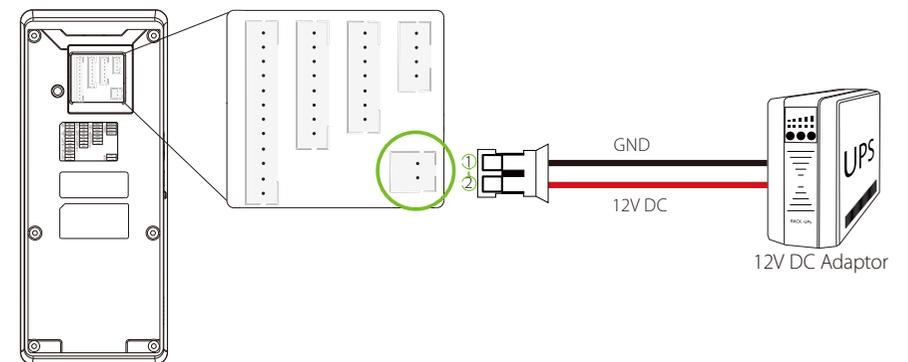


Recommended power supply


- 12V \pm 10%, at least 500mA.
- To share the power with other devices, use a power supply with higher current ratings

Ethernet Connection

LAN Connection

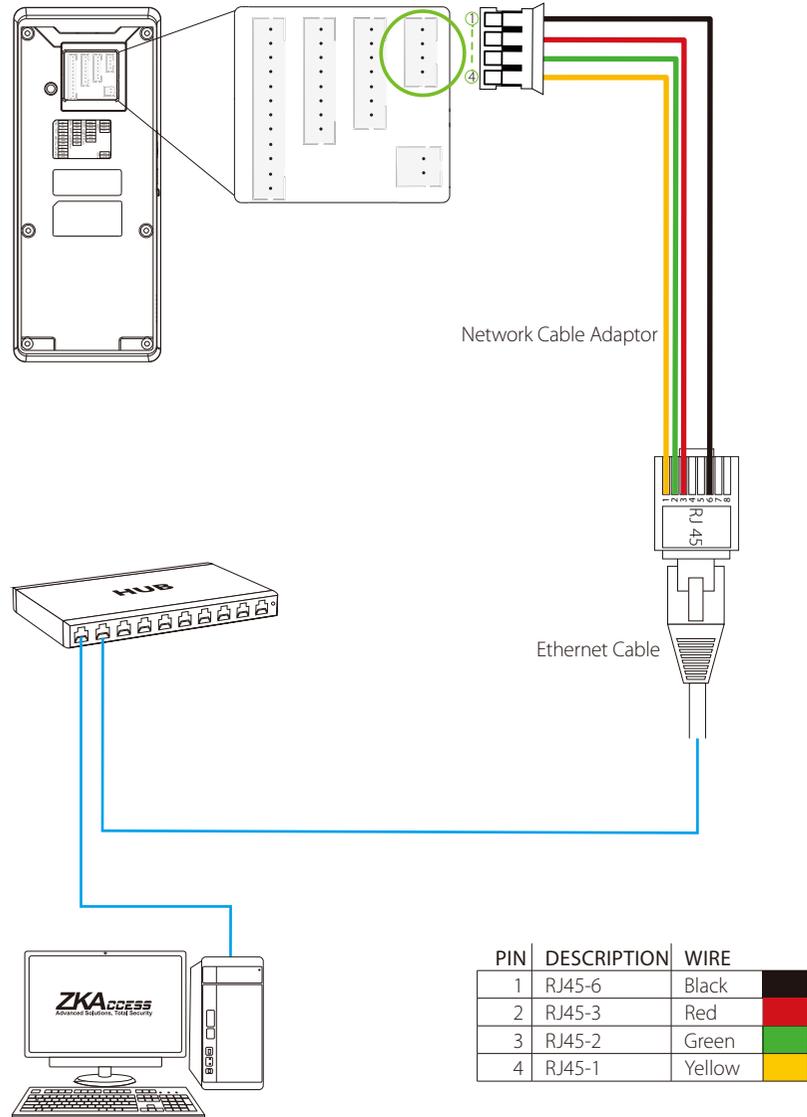


Direct Connection

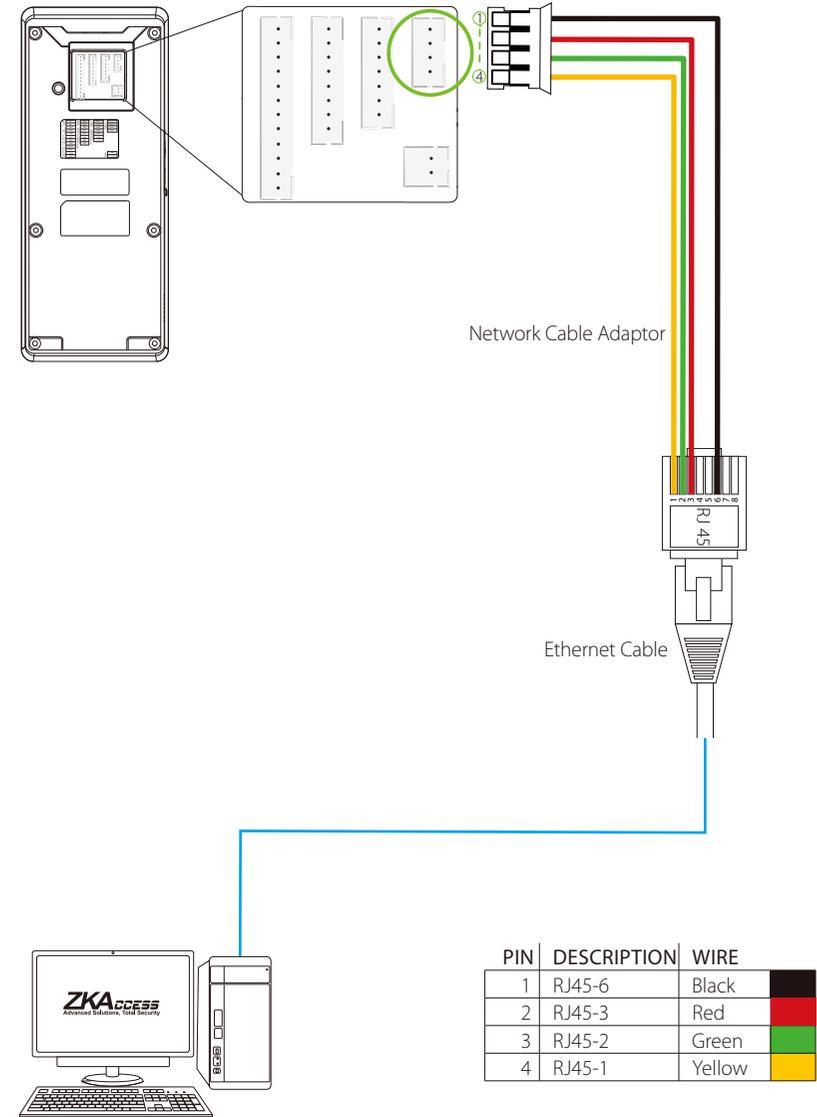

RS485 Connection

PC Connection

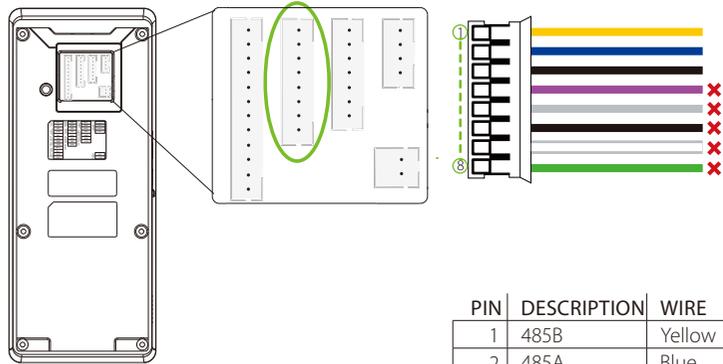


PIN	DESCRIPTION	WIRE	
1	485B	Yellow	
2	485A	Blue	
3	GND	Black	
4	TXD	Purple	
5	RXD	Gray	
6	GND	Black	
7	WD1	White	
8	WD0	Green	



✗ Do not use

Important Notes:

1. RS485 communication wires should be a shielded and twisted pair cable.
2. RS485 communication wires should be connected in a bus cascade instead of a star form, to achieve a better shielding effect by reducing signal reflection during communications.
3. Adjust the communication speed as needed. The signal quality vary depending on wiring conditions, and it maybe necessary to lower the baudrates.
4. The GND Signal may be omitted **if and only if** the GND potential difference is less than $\pm 5V$

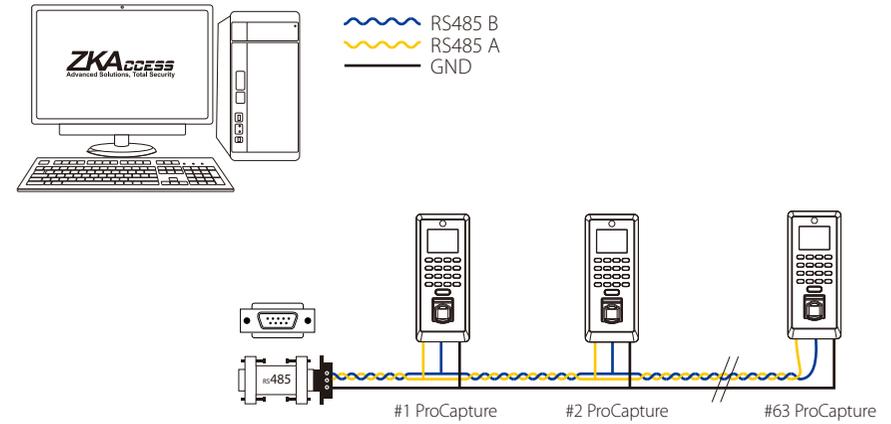

Incorrect RS 485 connections

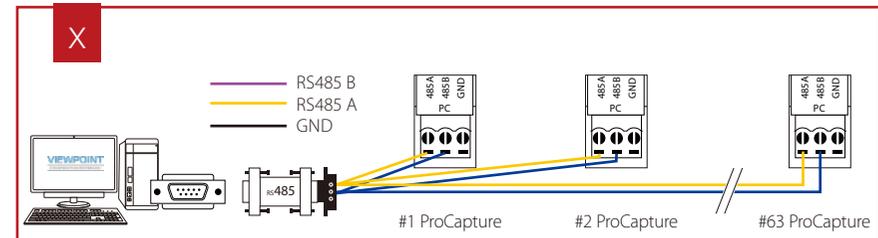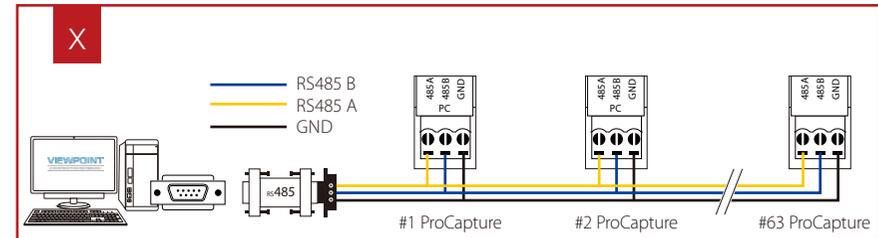


RS485 Connection

FR1200 Connection

PIN	DESCRIPTION	WIRE
1	BEEP	✗ Brown
2	GLEED	✗ Gray
3	RLED	✗ Blue
4	IWD1	✗ Green
5	IWD0	✗ White
6	GND	✗ Black
7	+12V	Red

✗ Do not use

PIN	DESCRIPTION	WIRE
1	485B	Yellow
2	485A	Blue
3	GND	Black
4	TXD	✗ Purple
5	RXD	✗ Gray
6	GND	✗ Black
7	WD1	✗ White
8	WD0	✗ Green

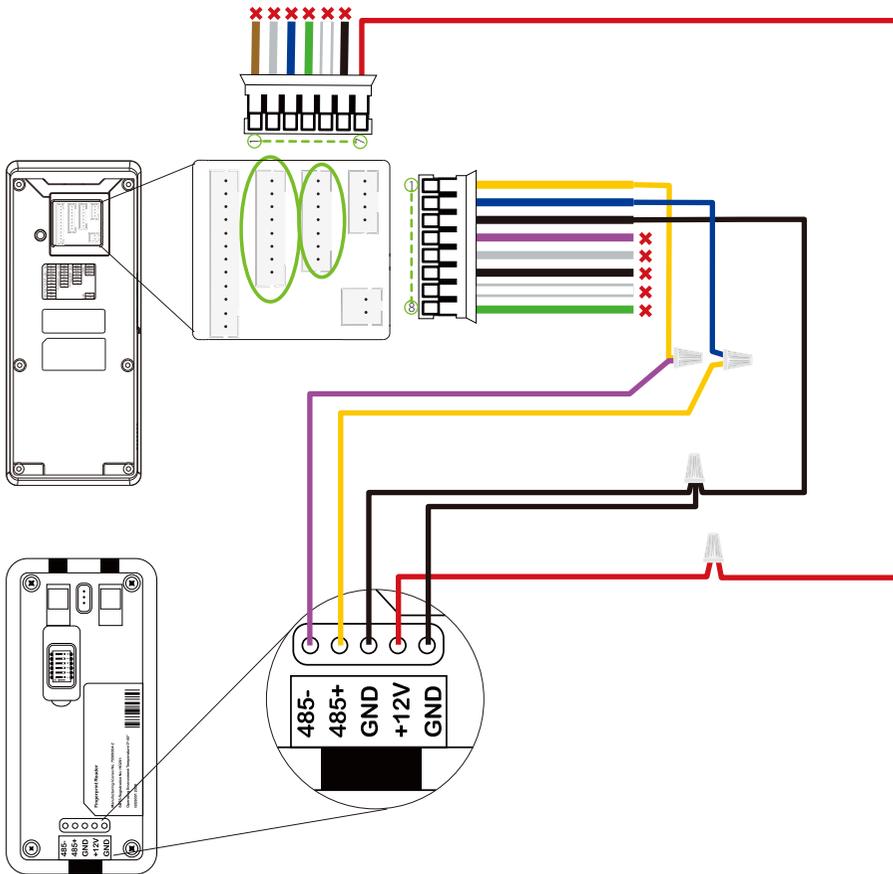


FR1200


System Settings




Select > Comm

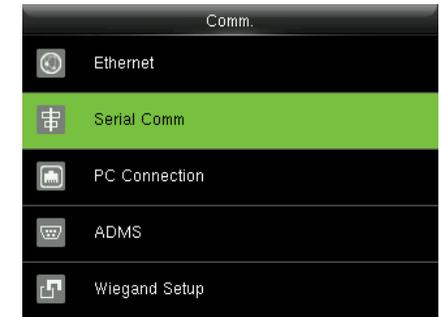

Select > Serial Comm

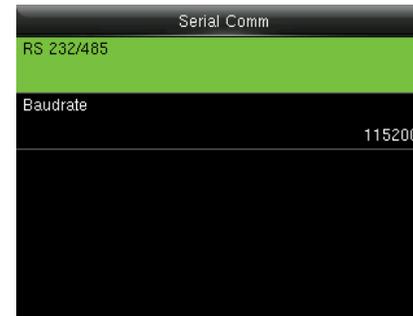


Select > RS232/485

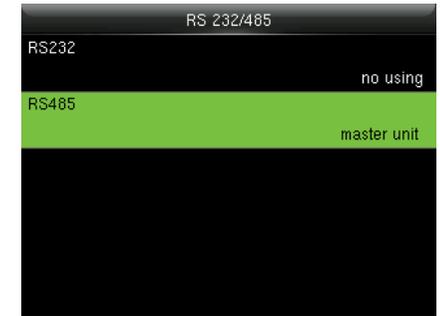

Change > RS485 to (master unit)


DIP Settings

1. There are six DIP switches on the back of FR1200, switches 1-4 is for RS485 address, switch 5 is reserved, switch 6 is for reducing noise on long RS485 cable.
2. If FR1200 is powered from ProCapture terminal, the length of wire should be less than 100 meters or 330 ft.
3. If the cable length is more than 200 meters or 600 ft., the number 6 switch should be ON as below

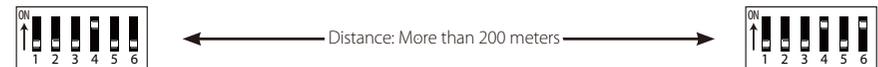

Lock Relay Connection

Device does not Share Power With The Lock

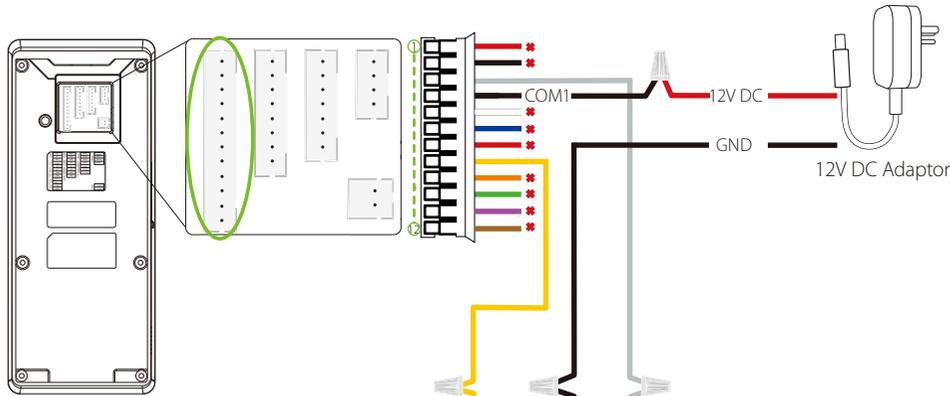

PIN	DESCRIPTION	WIRE
1	AL+	Red
2	AL-	Black
3	NC1	Gray
4	COM1	Black
5	NO1	White
6	BUT	Blue
7	GND	Red
8	SEN	Yellow
9	BELL+	Orange
10	BELL-	Green
11	GND	Purple
12	Aux	Brown

✗ Do not use


Normally Closed Lock

Notes:

1. The system supports **NO LOCK** and **NC LOCK**. For example the **NO LOCK** (normally open at power on) is connected with '**NO1**' and '**COM1**' terminals, and the **NC LOCK** (normally close at power on) is connected with '**NC1**' and '**COM1**' terminals.
2. When electrical lock is connected to the Access Control System, you must parallel one FR107 diode (equipped in the package) to prevent the self-inductance EMF affecting the system.

⚠ Do not reverse the polarities.

Device Shares Power With The Lock

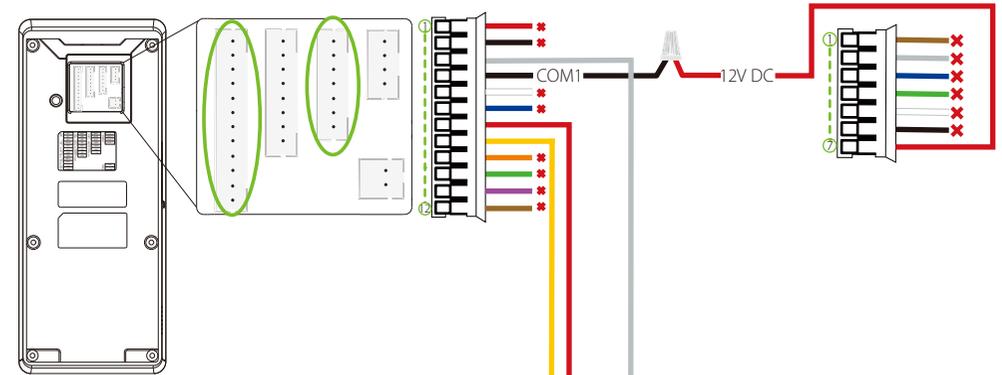


PIN	DESCRIPTION	WIRE
1	AL+	Red
2	AL-	Black
3	NC1	Gray
4	COM1	Black
5	NO1	White
6	BUT	Blue
7	GND	Red
8	SEN	Yellow
9	BELL+	Orange
10	BELL-	Green
11	GND	Purple
12	Aux	Brown


✗ Do not use

Normally Closed Lock

Wiegand Output Connection

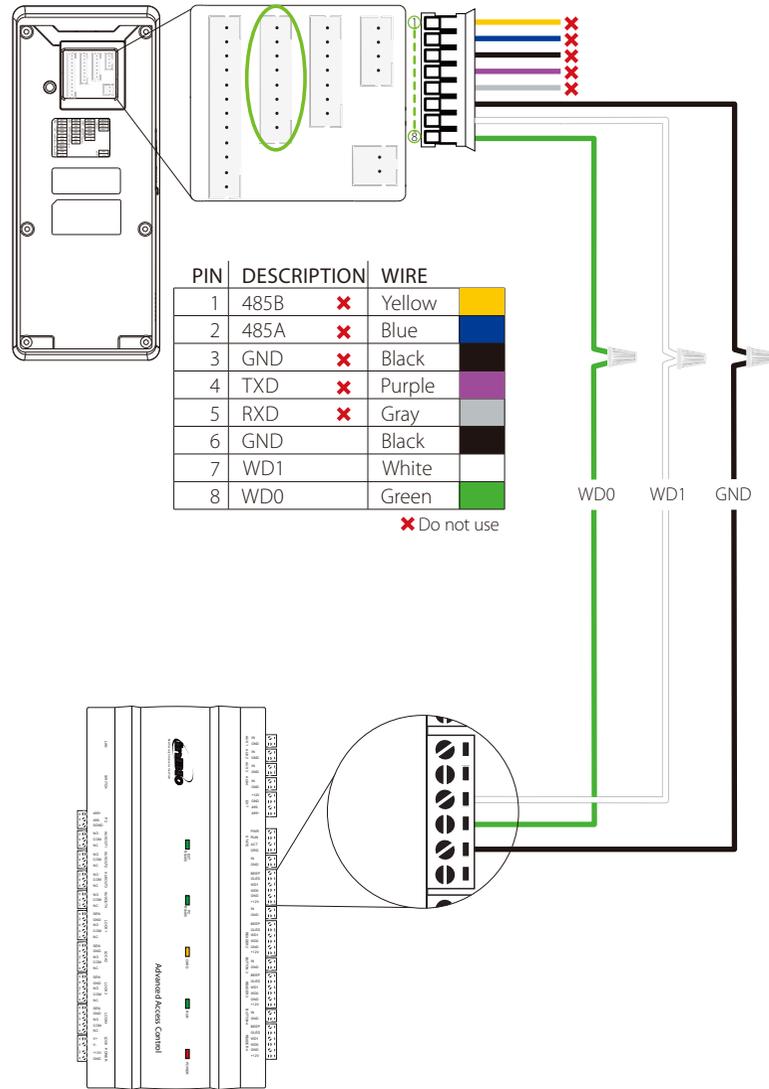


Standalone Installation

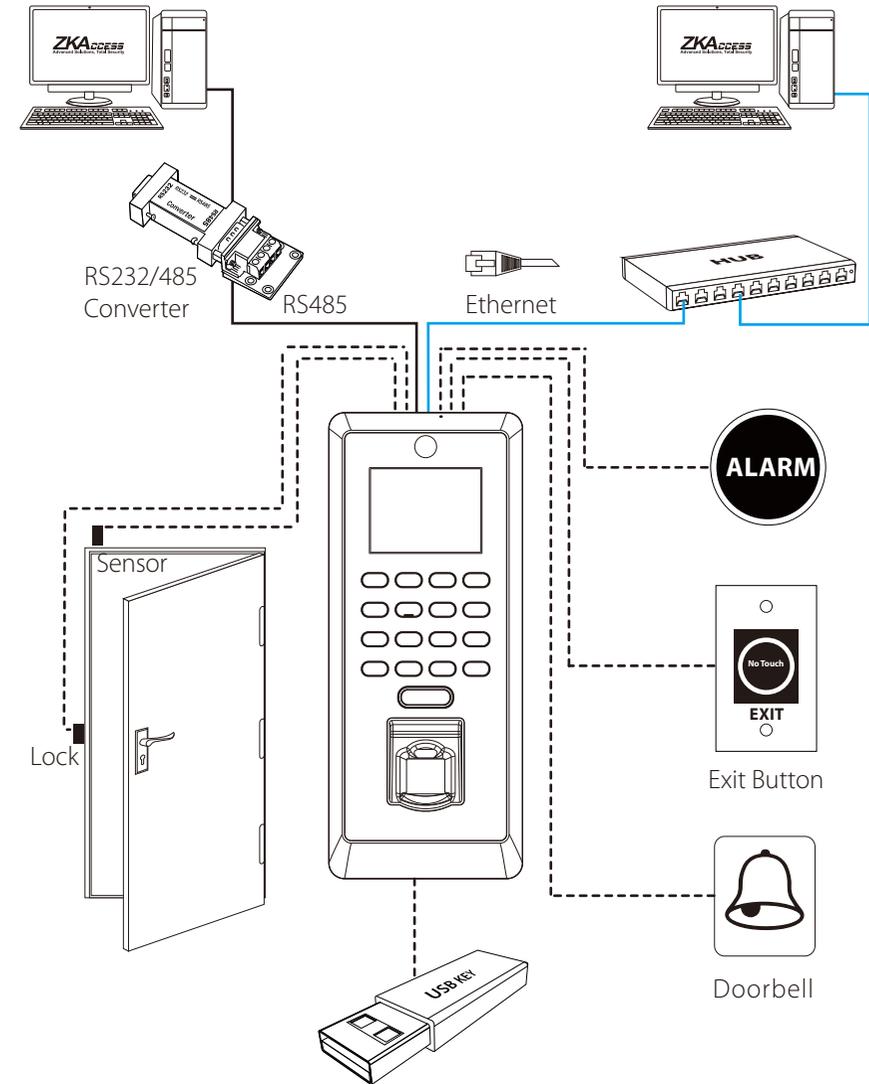


Third Party Controller

Wiegand Output Connection

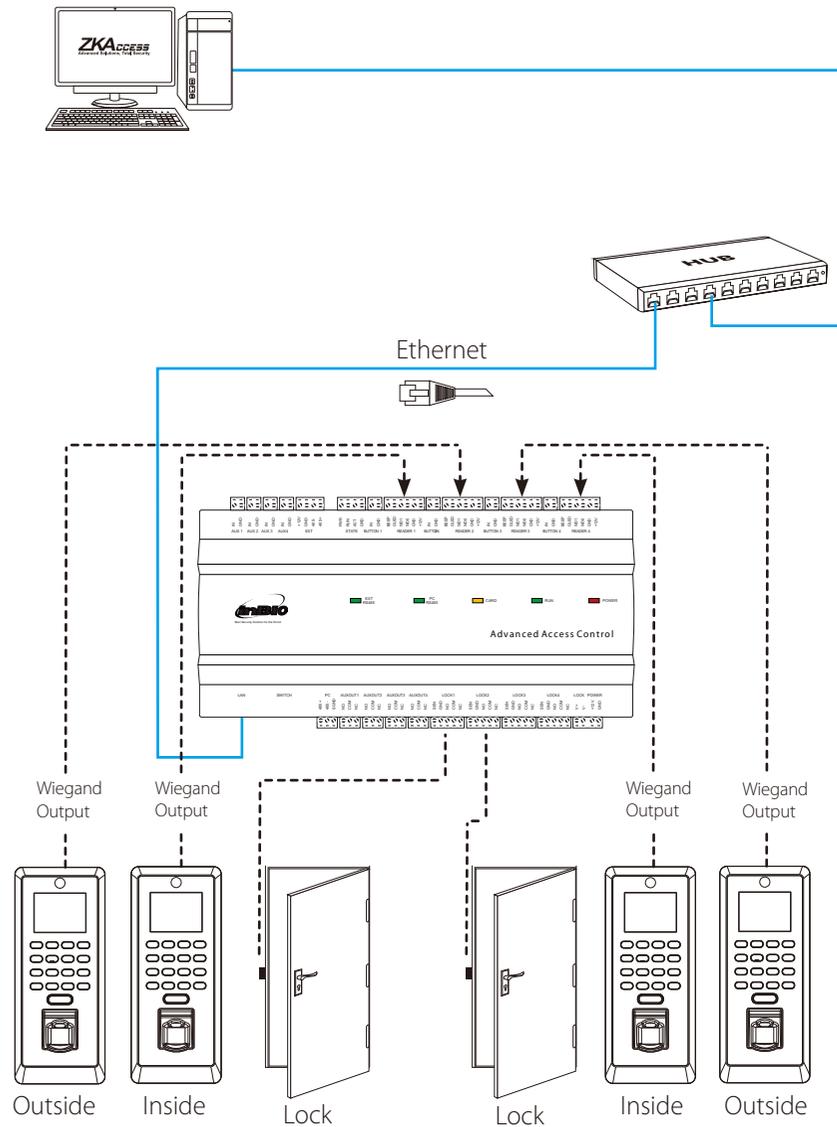

How Does ProCapture work

Fingerprint must be registered first by any finger print reader

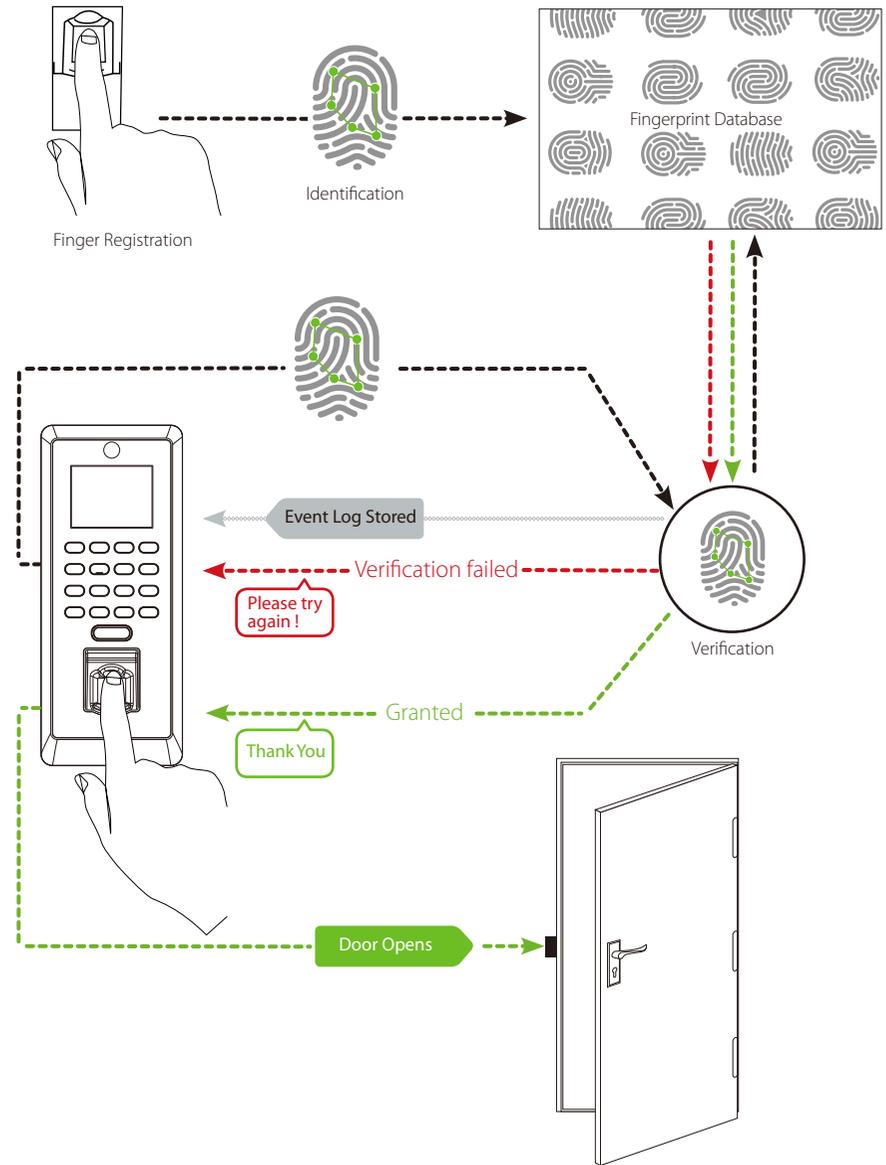


How to Place a Finger on Scanner

ZKTeco's fingerprint readers will give optimal results for fingerprint matching if the following recommendations and suggestions are followed.


Select a finger to enroll

- It is recommended to use an index finger or a middle finger.
- Thumb, ring or little finger are relatively difficult to place in the correct position

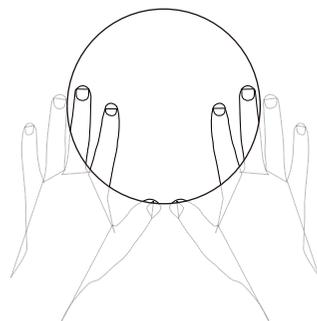


How to place a finger on a sensor

- Place a finger such that it completely covers the sensor area with maximum contact.
- Place core of the fingerprint at the center of the sensor. The core of a fingerprint is a center where the spiral of ridges is dense. (Usually core of fingerprint is the opposite side of the lower part of a nail.)
- Place a finger such that the bottom end of a nail is located at the center of a sensor.

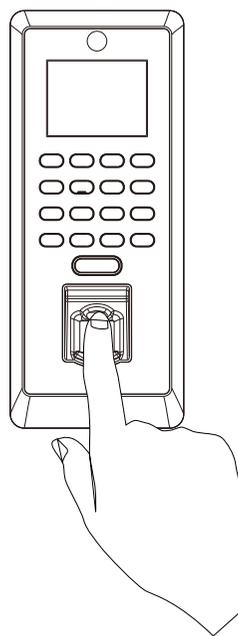

DO NOT place the finger in the following positions

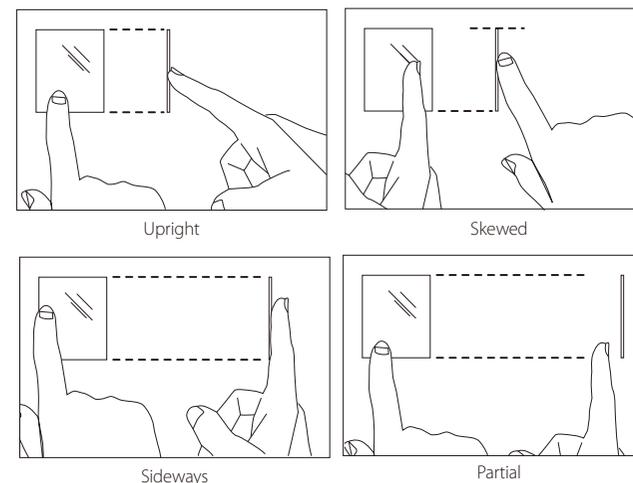

If a finger is placed as shown on the left, only a small area of a finger is captured. So it is recommended to place a finger as shown on page 21.

Tips for different fingerprint conditions

- ZKTeco's fingerprint products are designed to verify fingerprints with highest security irrespective of the conditions of the skin of the finger. However, in case a fingerprint is not read on the sensor, please refer to the followings tips.
 - If a finger is stained with sweat or water, scan after wiping moisture off.
 - If a finger is covered with dust or impurities, scan after wiping them off.
 - If a finger is too dry, please blow some warm air from your mouth on the finger tip.

Tips for fingerprint enrollment

- In fingerprint recognition, enrollment process is very important. When enrolling a fingerprint, please try to place the finger correctly with utmost care.
- In case of low acceptance ratio, the following actions are recommended.
 - Delete the enrolled fingerprint and re-enroll the finger.
 - Try another finger if a finger is not easy to enroll due to scar or cuts.
- In case of an enrolled fingerprint cannot be used due to injury or if the hand is full, it is recommended to enroll more than two fingers per user.

